

# YOUR NEW WIRELESS GENIE® MINI IS HERE!



Here's how to connect and activate your Wireless Genie Mini so you can enjoy the best in video entertainment.

- 1  
Connect
- 2  
Setup
- 3  
Activate
- 4  
Program



## 1 CONNECT YOUR WIRELESS GENIE® MINI

- Connect the HDMI cable from your TV to your new Genie Mini.
- Plug the power cord into the Genie Mini, then into a power outlet. If it doesn't automatically power up, press the POWER button.
- Turn on your TV. The CONNECTING TO VIDEO BRIDGE screen will appear.

## 2 SETUP

Go to the Genie 2 Server.

- Press and release the ADD CLIENT button on top. It will start flashing GREEN.

*Note: The ADD CLIENT button will time out in 20 minutes. If you need more time, press it again.*

Go back to your new Wireless Genie Mini:

- You should see the CONNECT TO VIDEO BRIDGE screen.
- If the signal quality is good or excellent, select CONNECT NOW; otherwise, try moving the Client closer to the Genie® 2 Server or call Customer Care at **800.531.5000**.
- Follow the guided setup instructions.

*Note: The new Genie Mini may display a flashing red LED and the screen may flash gray intermittently during this setup step.*

- Once the guided setup is complete, select WATCH TV.

## 3 ACTIVATE YOUR REPLACEMENT GENIE MINI

Go to [directv.com/activate](http://directv.com/activate) and sign in, then follow the instructions, OR


Call **800.388.6597** for our automated activation line.

## 4 PROGRAM YOUR REMOTE CONTROL

If you are prompted to program your remote control, follow the on-screen instructions or go to [directv.com/programremote](http://directv.com/programremote)

For more information, go to [directv.com/support](http://directv.com/support)

**Tip:** Search "Wireless Genie Mini"



Instructions can be found online at [directv.com/equipmentinstall](http://directv.com/equipmentinstall) or by scanning the QR code.

