# Pair your Gemini / Gemini Air

- > Turn on your TV
- > Switch to the proper input
- > Press and release the reset button on the side (Gemini) or rear (Gemini Air) of your device
- > Remove the battery strip from the remote
- After the device has rebooted, press and hold <<RW and FF>> at the same time for 3 seconds
- > When successfully paired, you'll receive a message that your remote is ready to use

Visit directv.com/directvremote for help programming your Gemini / Gemini Air Remote.

Or scan the code below to learn more about how to set up or troubleshoot your remote or receiver.



# DIRECTV

# Gemini / Gemini Air Remote Guide

directv.com/directvremote

©2024 DIRECTV Intellectual Property.
All Rights Reserved.
DIRECTV and all other DIRECTV marks are
trademarks of DIRECTV, LLC. All other marks are
the property of their respective owners.

## Gemini / Gemini Air Remote

### ON

Turns ON both Gemini / Gemini Air and TV at the same time

### **INPUT**

Cycle through and select the equipment connected to your TV

### GUIDE

Press to display the GUIDE screen

### RECORD

RECORD content now playing or highlighted in the on-screen guide

### BACK

Press to go BACK within menus

### VOLUME UP/DOWN

Increase or decrease the VOLUME level

### MUTE

MUTE the sound

### **GOOGLE ASSISTANT**

Push and hold to talk to Google Assistant to control your TV using your voice

### REWIND

REWIND at increasing speeds—press up to four times. Also use to pair the remote.

### PLAY/PAUSE

PLAY current content. Press once while program is playing to PAUSE.

### DASH

Press and hold to view device info



### OFF

Turns OFF both Gemini / Gemini Air and TV at the same time

### HOME

Press to display the HOME screen

### LIST

Press to display "My Library" (DVR recordings)

### EXIT

Press to EXIT the menu and return to the previous channel viewed, or stop playback while viewing On Demand or recorded content

### **DIRECTIONAL BUTTONS**

Press to move up, down, left, or right within a menu

### **OVERFLOW**

Signifies that more content/actions are available

### CHANNEL UP/DOWN

Press to change the CHANNEL UP or DOWN

### **PREV**

Press to tune to the PREVIOUS channel or to VOD

### FAST-FORWARD

FAST-FORWARD at increasing speeds—press up to four times. Also use to pair the remote.

### PPS

Opens the APPS menu. Also use to unpair the remote.